



Thank you for your purchase! You are now the owner of a truly revolutionary instrument. It is designed to give you many years of entertainment.

We know that you want to enjoy it right away, so here is the quick setup guide:

- Carefully unpack your guitar. Nice!
- The white box contains the power supply. It can be used in the USA or in other countries. To get it ready, choose the plug that applies to your country and observe the "TOP" label of the plug. Place the "TOP" part of the plug into the power supply at its top (furthest away from the cord) at an angle then press firmly and it will snap into place.
- Plug the small end of the power supply into the back of the guitar at the LOWER receptacle (towards the base of the guitar).
- Plug the 1/8" stereo cable (also in the white box) into the back of the guitar at the UPPER receptacle (towards the top of the guitar).
- Plug the other end of the 1/8" stereo cable into your music player, iPod, CD player, cassette player, etc. using the headphone or line-out connection on your player.
- Plug the power supply into an appropriate power outlet, then turn the volume knob on the back of the guitar clockwise approximately one half turn. The blue light will illuminate on the back panel to let you know that the guitar is ready to play music.
- Enjoy beautiful guitar music the way that the artist's play it.

Our patented Entertainer Sound System™ reproduces acoustic guitar music that is authentic. You will notice the nuances in the instrument's presentation that cannot be duplicated with conventional loudspeakers or any other sound system. The reason is that the guitar's natural resonant sound mechanisms are being used to reproduce the music. You can feel the effects by simply touching the surface of the guitar, and you can even observe the strings themselves getting "involved".

Our guitars are every bit as playable as any other. The difference is that one needs not know anything about playing acoustic guitar music to experience live-like acoustic guitar music.

Limited Warranty

Entertainer Guitar warrants to the original owner-user that this Entertainer Guitar product will be free from defects in material or workmanship. This warranty is limited to twelve (12) months from the date of customer purchase, whether or not actual use begins on that date.

Limitations and Exclusions

Entertainer Guitar's obligations under this warranty and the sole remedy for its breach are limited to repair, at its manufacturing facility, of any part or parts of its Entertainer Guitar products which prove to be defective; or, in its sole discretion, replacement of such products. All returns of defective parts or products must include the product model number and serial number, and must be made by prior arrangement by calling Entertainer Guitar customer service. Authorized returns must be shipped prepaid. Repaired or replacement parts will be shipped by Entertainer Guitar.

1. All claims under the warranty provided herein must be made within ninety (90) days from the date of discovery of the defect. Failure to notify Entertainer Guitar of a warranted defect within ninety (90) days of its discovery voids Entertainer Guitar's obligations hereunder.
2. The warranty provided herein shall be void and of no effect in the event that:
 - (a) the product has been subjected to misuse, neglect, accident, improper or inadequate maintenance, corrosive environments;
 - (b) unauthorized modifications are made to the product;
 - (c) the product is not installed and operated in compliance with applicable building, mechanical and electrical codes; or
 - (d) the serial number of the product has been altered, defaced or removed.
3. The warranty provided herein is for repair or replacement only. Entertainer Guitar shall not be liable for any loss, cost, damage, or expense of any kind arising out of a breach of the warranty. Further, Entertainer Guitar shall not be liable for any incidental, consequential, exemplary, special, or punitive damages, nor for any loss of revenue, profit or use, arising out of a breach of this warranty or in connection with the sale, maintenance, use, operation or repair of any Entertainer Guitar product. In no event will Entertainer Guitar be liable for any amount greater than the purchase price of a defective product. The disclaimers of liability included in this paragraph 2 shall remain in

effect and shall continue to be enforceable in the event that any remedy herein shall fail of its essential purpose.

4. THIS WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY FOR Entertainer Guitar PRODUCTS, AND IS IN LIEU OF ALL OTHER EXPRESS AND IMPLIED WARRANTIES. Entertainer Guitar SPECIFICALLY DISCLAIMS ALL OTHER EXPRESS AND IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. No person or entity is authorized to bind Entertainer Guitar to any other warranty, obligation or liability for any Entertainer Guitar product. Installation, operation or use of the Entertainer Guitar product for which this warranty is issued shall constitute acceptance of the terms hereof.